

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3Q631EN00000	OPTIM 1-2,5-440;	2,5 kvar	1	Standard	Standard	Standard
R3J0050000K00	OPTIM 3-5-230;	5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q641EN00000	OPTIM 1-5-440;	5 kvar	1	Standard	Standard	Standard
R3Q761EN00000	OPTIM 2-7,5-440;	7,5 kvar	3	Standard	Standard	Standard
R3J105.	OPTIM 3-7,5-440;	7,5 kvar	2	Standard	Standard	Standard
R3Q771EN00000	OPTIM 2-10,5-440;	10,5 kvar	2	Standard	Standard	Standard
R3L110.	OPTIM 3 P&P-12,5-440;	12,5 kvar	16	Standard	Standard	Standard
R3Q681EN00000	OPTIM 1-12,5-440;	12,5 kvar	10	Standard	Standard	Standard
R3Q781EN00000	OPTIM 2-12,5-440;	12,5 kvar	7	Standard	Standard	Standard
R3L1100000K00	OPTIM 3 P&P-12,5-440;	12,5 kvar	4	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1100010K00	OPTIM 3 P&P-12,5-440;	12,5 kvar	3	Autotransf. maniobra	Standard	Automatic switch 63 A + Earth leakage
R3L1A2.	OPTIM 3 P&P-12,5-230;	12,5 kvar	3	Standard	Standard	Standard
R3L1A20000K00	OPTIM 3 P&P-12,5-230;	12,5 kvar	3	Standard	Standard	Automatic switch 63 A + Earth leakage
R3J110EN000K00	OPTIM 3-12,5-440;	12,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q691EN00000	OPTIM 1-15-440;	15 kvar	6	Standard	Standard	Standard
R3L120.	OPTIM 3 P&P-17,5-440;	17,5 kvar	24	Standard	Standard	Standard
R3L1200000K00	OPTIM 3 P&P-17,5-440;	17,5 kvar	10	Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q7E1EN00000	OPTIM 2-17,5-440;	17,5 kvar	3	Standard	Standard	Standard
R3L1A70000K00	OPTIM 3 P&P-17,5-230;	17,5 kvar	2	Standard	Standard	Automatic switch 63 A + Earth leakage
R3J1150010000	OPTIM 3-17,5-440;	17,5 kvar	1	Autotransf. maniobra	Standard	Standard
R3L120000N000	OPTIM 3 P&P-17,5-440;	17,5 kvar	1	Standard	#N/A	Standard
R3L120000S000	OPTIM 3 P&P-17,5-440;	17,5 kvar	1	Standard	computer SMART III 6	Standard
R3L120000SK00	OPTIM 3 P&P-17,5-440;	17,5 kvar	1	Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3Q7F1EN00000	OPTIM 2-20-440;	20 kvar	3	Standard	Standard	Standard
R3L119ZG00000	OPTIM 3 P&P-21-440;	21 kvar	2	Standard	Standard	Standard
R3Q7G1EN00000	OPTIM 2-22,5-440;	22,5 kvar	1	Standard	Standard	Standard
R3L130.	OPTIM 3 P&P-25-440;	25 kvar	21	Standard	Standard	Standard
R3L1300000K00	OPTIM 3 P&P-25-440;	25 kvar	6	Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q6F1EN00000	OPTIM 1A-25-440;	25 kvar	5	Standard	Standard	Standard
R5R455.	Optim FRS-25-440;	25 kvar	2	Standard	Standard	Standard
R3Q7H1EN00000	OPTIM 2-25-440;	25 kvar	2	Standard	Standard	Standard
R34604000EKXX	STD4-25-440;	25 kvar	1	Standard	computer Plus 8T-CDI	Automatic switch 63 A + Earth leakage
R3L130000SK00	OPTIM 3 P&P-25-440;	25 kvar	1	Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1A5.	OPTIM 3 P&P-25-230;	25 kvar	1	Standard	Standard	Standard
R3L132ZG00000	OPTIM 3 P&P-26,25-440;	26,25 kvar	4	Standard	Standard	Standard
R3Q6D1EN00000	OPTIM 1A-30-440;	30 kvar	7	Standard	Standard	Standard
R3Q7J1EN00000	OPTIM 2-30-440;	30 kvar	4	Standard	Standard	Standard

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R36637EN00K00	STD3-31,25-440;	31,25 kvar	59	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L140.	OPTIM 3 P&P-31,25-440;	31,25 kvar	17	Standard	Standard	Standard
R3L1400000K00	OPTIM 3 P&P-31,25-440;	31,25 kvar	6	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L140000SK00	OPTIM 3 P&P-31,25-440;	31,25 kvar	3	Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L140000S000	OPTIM 3 P&P-31,25-440;	31,25 kvar	2	Standard	computer SMART III 6	Standard
R3L150.	OPTIM 3 P&P-37,5-440;	37,5 kvar	15	Standard	Standard	Standard
R3L1500000X00	OPTIM 3 P&P-37,5-440;	37,5 kvar	2	Standard	Standard	Automatic switch 80 A + Earth leakage
R3H146EN00M00	STD4-37,5-230;	37,5 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R55370.	FRF-37,5-440;	37,5 kvar	1	Standard	Standard	Standard
R3J1350020K00	OPTIM 3A-37,5-440;	37,5 kvar	1	Fan	Standard	Automatic switch 63 A + Earth leakage
R3L1500000K00	OPTIM 3 P&P-37,5-440;	37,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1A100000BD	OPTIM 5 P&P-37,5-230;	37,5 kvar	1	Standard	Standard	Standard
R3L160.	OPTIM 3 P&P-43,75-440;	43,75 kvar	11	Standard	Standard	Standard
R34610EN00L00	STD4-43,75-440;	43,75 kvar	10	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L1600000L00	OPTIM 3 P&P-43,75-440;	43,75 kvar	7	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J140.	OPTIM 3A-43,75-440;	43,75 kvar	1	Standard	Standard	Standard
R346150000300	STD4-50-440;	50 kvar	1	Standard	Standard	Manual switch 200 A
R34615EN00L00	STD4-50-440;	50 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J1450020L00	OPTIM 3A-50-440;	50 kvar	1	Fan	Standard	Automatic switch 125 A + Earth leakage
R3J8990000300	OPTIM 6-50-230;	50 kvar	1	Standard	Standard	Manual switch 200 A
R3L170.	OPTIM 3 P&P-52,5-440;	52,5 kvar	17	Standard	Standard	Standard
R3L1700000L00	OPTIM 3 P&P-52,5-440;	52,5 kvar	3	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L210.	OPTIM 5 P&P-55-440;	55 kvar	5	Standard	Standard	Standard
R34620000P000	STD4-55-440;	55 kvar	3	Standard	computer PLUS+EDS	Standard
R3J205000S000	OPTIM 4-55-440;	55 kvar	1	Standard	computer SMART III 6	Standard
R3L2100000L00	OPTIM 5 P&P-55-440;	55 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J205.	OPTIM 4-55-440;	55 kvar	1	Standard	Standard	Standard
R34623EN00L00	STD4-60-440;	60 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3H217EN00N00	STD6-60-230;	60 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L180.	OPTIM 3 P&P-62,5-440;	62,5 kvar	13	Standard	Standard	Standard
R3J150.	OPTIM 3A-62,5-440;	62,5 kvar	7	Standard	Standard	Standard
R3L1800000L00	OPTIM 3 P&P-62,5-440;	62,5 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L220.	OPTIM 5 P&P-70-440;	70 kvar	11	Standard	Standard	Standard
R3L2200000L00	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J220000T300	OPTIM 4-75-440;	75 kvar	1	Standard	computer SMART III 12	Manual switch 200 A
R3L2230000MKE	OPTIM 5 P&P-75-440;	75 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R34635000P000	STD4-80-440;	80 kvar	1	Standard	computer PLUS+EDS	Standard

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R34635EN00M00	STD4-80-440;	80 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L230.	OPTIM 5 P&P-90-440;	90 kvar	12	Standard	Standard	Standard
R3L2300000N00	OPTIM 5 P&P-90-440;	90 kvar	3	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L2300000300	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	Standard	Manual switch 200 A
R3L230000K000	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	#N/A	Standard
R3L230000S0MK	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	computer SMART III 6	Standard
R3L2300010000	OPTIM 5 P&P-90-440;	90 kvar	1	Autotransf. maniobra	Standard	Standard
R34637.	STD4-100-440;	100 kvar	3	Standard	Standard	Standard
R346370000N00	STD4-100-440;	100 kvar	2	Standard	Standard	Automatic switch 250 A + Earth leakage
R5S420000N00	OPTIM FR4-100-440;	100 kvar	1	Standard	#N/A	Standard
R6E4200001000	FRE4-100-440;	100 kvar	1	Standard	Computer 8d	Standard
R3L240.	OPTIM 5 P&P-105-440;	105 kvar	3	Standard	Standard	Standard
R34639EN00M00	STD4-105-440;	105 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L2400000M00	OPTIM 5 P&P-105-440;	105 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L2400010N00	OPTIM 5 P&P-105-440;	105 kvar	1	Autotransf. maniobra	Standard	Automatic switch 250 A + Earth leakage
R3L2400000300	OPTIM 5 P&P-105-440;	105 kvar	1	Standard	Standard	Manual switch 200 A
R6E422EN00N00	FRE4-125-440;	125 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L250.	OPTIM 5 P&P-135-440;	135 kvar	6	Standard	Standard	Standard
R3L2500000400	OPTIM 5 P&P-135-440;	135 kvar	1	Standard	Standard	Manual switch 250A
R3L2500000N00	OPTIM 5 P&P-135-440;	135 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L260.	OPTIM 5 P&P-150-440;	150 kvar	3	Standard	Standard	Standard
R3L2600000N00	OPTIM 5 P&P-150-440;	150 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L2600010000	OPTIM 5 P&P-150-440;	150 kvar	1	Autotransf. maniobra	Standard	Standard
R3L310.	OPTIM 9 P&P-165-440;	165 kvar	2	Standard	Standard	Standard
R3L3100000E00	OPTIM 9 P&P-165-440;	165 kvar	1	Standard	Standard	Automatic switch 400 A
R3L330.	OPTIM 9 P&P-225-440;	225 kvar	2	Standard	Standard	Standard
R3J545001T000	OPTIM 12-240-440;	240 kvar	6	Autotransf. maniobra	computer SMART III 12	Standard
R3L3500000P00	OPTIM 9 P&P-270-440;	270 kvar	1	Standard	Standard	Automatic switch 630 A + Earth leakage
R3L410.	Optim 8 P&P-300-440;	300 kvar	2	Standard	Standard	Standard
R3L420.	OPTIM 8 P&P-330-440;	330 kvar	1	Standard	Standard	Standard
R5S4320000600	Optim FR4 P&P-350-440;	350 kvar	1	Standard	Standard	Manual switch 630 A
R3L430.	Optim 8 P&P-390-440;	390 kvar	1	Standard	Standard	Standard
R3I6260090000	STD SC8-506-400;	506 kvar	2	60 Hz	Standard	Standard
R35L200000900	OPTIM 8L P&P-650-440;	650 kvar	1	Standard	Standard	Manual switch 1600 A
R544206400000	FR12-720-400;	720 kvar	1	Standard	Standard	Standard
R54T30000SQ00	Optim FR6-P&P-450-440;	P&P kvar	1	Standard	computer SMART III 6	Automatic switch 800 A + Earth leakage